


GR6HHP / GR5HHP Hand-Held Programmer

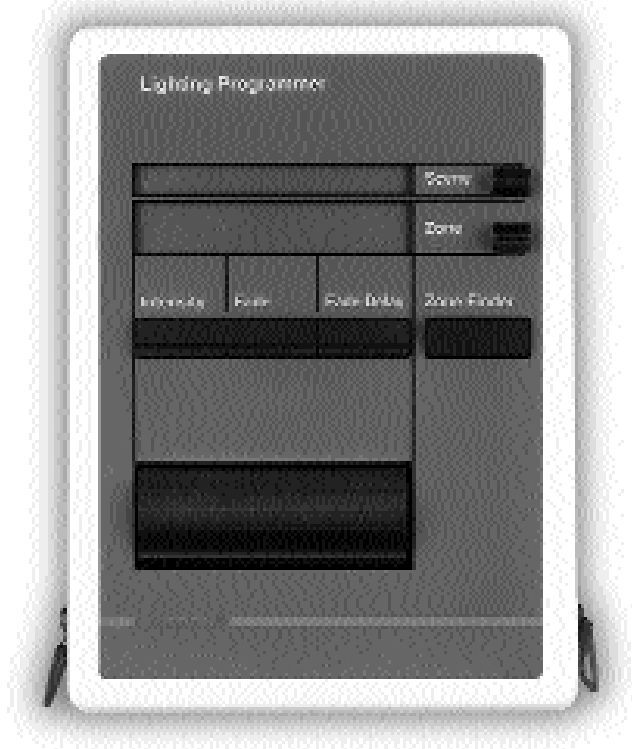

DESCRIPTION

Compact and portable. Lets you set up GRAFIK 5000/6000 System scenes and zones in real time, without a PC. Just plug the Hand-Held Programmer into the nearest Hand-Held Programmer Jack. Then select the area and scene you want to tweak. You can:

- Activate the scene and adjust its zone intensities
- View a zone - all the lights in the zone flash
- Change a zone's fade time and fade delay time

Because you're working where the lighting is, you can see your adjustment immediately.

Specify Hand-Held Programmer Jacks for each main area of the project. (Jacks have no address and do not count as one of the 32 Wallstations, Control Units, or Control Interfaces allowed on a Wallstation Link.) That way, you can use the Hand-Held Programmer anywhere in the installation.

SPECIFICATIONS

Power

Key Design Features

- LCD display screen
- 25-foot (7m) cord with self-locking connector plugs into NTOMX-HHPJ Hand-Held Programmer Jack.
- Hard-cover, foam-padded custom carrying case.

Preset Lighting Adjustments

- Select any area, scene, or zone
- View any zone – all the lights in the zone flash
- Change zone intensities¹ from off to the maximum level in 1% increments
- Change zone fade and fade delay times¹ in these ranges and increments:

Time Ranges	Increments
0 to 9.9 seconds	0.1 second
10 to 99 seconds	1.0 second
1.7 to 9.9 minutes	.1 minute
10 to 99 minutes	1.0 minute

¹ You can't adjust zones assigned to Sliders from the Hand-Held Programmer.

System Communications and Capacity

Works within 25 feet (7m) of anywhere there's a NTOMX-HHPJ Hand-Held Programmer Jack. Only one Hand-Held Programmer or PC User Interface in use at a time. (PC takes priority over Hand-Held Programmer.)

Physical Design

Color: Beige

Height: 7.31"(186mm), Width: 5.38"(137mm), Depth: 2.13"(54mm)

JOB NAME:	MODEL NUMBERS:
JOB NUMBER:	