

DMX-512 Output from HomeWorks

Programming

Each DMX device/fixture is different, so you will need to reference the instruction manual for the particular product you are using to determine how it gets programmed. Normally, there will be a lookup chart included with the device that will explain what values need to be sent to the device to accomplish specific tasks. If you are using a fixture that has 3 channels (Red, Green, Blue), you would program it as follows to turn on the Red to maximum saturation and leave the Green and Blue off:

Fixture A Red – 100%

Fixture A Green – 0%

Fixture A Blue – 0%

Typically, the “light level” corresponds to the amount of saturation for the color that the channel is assigned to.